

DOMESTIC LAWN MOWER



REQUIRED PPE (Personal Protective Equipment)



Eye protection is required



Hearing protection is required



Foot protection is required



Hand protection is required

DON'Ts

- Don't have children around while operating the mower
- Don't clean out grass with hands while engine is running
- Don't empty the catcher when engine is running
- Don't tip the mower when engine is running
- Don't touch engine area after use (hot surface)
- Don't leave engine running while unattended

PRE-START CHECKS AND SAFETY

- Check blade for condition and secure attachment
- Check if fuel tank is full
- Set cuttings height
- Fit catcher if required and check for proper attachment
- While on mulch mode, grass discharge flat must be on down (closed)
- Check your area and make it free of debris (stones, wood, garden hose, etc...)

STARTING PROCEDURE

- Position the mower on a flat and hard surface free of debris
- Move throttle lever to the run position (max)
- Hold the handle with one hand
- Hold starter pull cord and pull it towards you (several tries might be required)
- If excessive vibration occurs please stop it immediately

WHILE OPERATING

- Empty catcher when it is full. Don't remove catcher from mower while engine is running
- Don't leave engine running while unattended
- Keep your feet clear from mower
- Keep your hands away from mower blades and engine

STOPPING & AFTER USE

- Move throttle lever to the stop position
- Remove and empty catcher if necessary
- You can wash the inside of the case and blade using your garden hose. Please only tilt the mower front or backwards and never sideways
- Allow engine to cool down